

9133 Parts List

BARREL COMPLETE	001-995
CENTER WHEEL & PINION	012-A43
THIRD WHEEL AND PINION	017-A11
FOURTH WHEEL AND PINION	023-A27
CANNON PINION WITH DRIVING WHEEL	028-A22
ESCAPE WHEEL AND PINION	032-991
JEWELLED PALLET FORK AND STAFF	035-702
BALANCE WITH HAIRSPRING REGULATED	039-993
CROWN WHEEL	058-501
RATCHET WHEEL	059-802
CLICK	060-551
WINDING PINION	063-351
CLUTCH WHEEL	064-991
SETTING STEM	065-A05
SETTING LEVER	067-995
YOKE	071-995
MINUTE WHEEL AND PINION	072-999
HOUR WHEEL	075-A63
SETTING WHEEL	076-751
SETTING LEVER SPRING	077-996
DIAL WASHER(1)	078-400
DIAL WASHER(2)	078-660
CASING CLAMP(x2) (OPTION)	082-060
INTERMEDIATE DATE CORRECTING WHEEL	087-A72
RATCHET SLIDING WHEEL(2)	087-A74
INTERMEDIATE DATE WHEEL(1)	087-A93
INTERMEDIATE DATE WHEEL(2)	087-A94
INTERMEDIATE POWER RESEPVW WHEEL(1)	087-A95
INTERMEDIATE POWER RESERVE WHEEL(2)	087-A97
INTERMEDIATE POWER RESFRVE WHEEL(3)	087-B01
INTERMEDIATE POWER RESERVE WHEEL(4)	087-B02
RATCHET SLIDING WHEEL(1)	087-B08
INTERMEDIATE POWER RESERVE WHEEL(5)	087-B28
INTERMEDIATE POWER RESERVE WHEEL(6)	087-B29
INTERMEDIATE REDUCTION WHEEL AND PINION(2)	088-252
INTERMEDIATE REDUCTION WHEEL AND PINION(3)	088-253
INTERMEDIATE REDUCTION WHEEL AND PINION(1)	088-254

INTERMEDIATE REDUCTION WHEEL AND PINION(3)	088-253
INTERMEDIATE REDUCTION WHEEL AND PINION(1)	088-254
CAP JEWEL MOUNTED(2)	094-010
CAP JEWEL MOUNTED(1)	094-040
SPIRAL SPRING WITH JEWEL(1)	098-090
SPIRAL SPRING WITH JEWEL(2)	098-090
24HOUR WHEEL	103-A20
CALENDAR CORRECTOR FINGER	106-860
DATE DIAL	108-N4XX
DATE JUMPER	109-875
INTERMEDIATE REDUCTION WHEEL AND PINION(1) SPRING-CLIP	115-101
TRAIN WHEEL GUARD(AUTOMATIC)	117-354
TRAIN WHEEL GUARD(MANUAL-WINDING)	117-361
OSCILLATING WEIGHT	119-B03
INTERMEDIATE REDUCTION WHEEL AND PINION(4)	138-251
REVERSING WHEEL	141-251
POWER RESERVE WHEEL	189-163
CALENDAR CORRECTOR WHEEL	213-623
OPERATING LEVER	257-152
BREAKELEVER FOR SECOND HAND	269-402
DATE DIAL GUARD	293-A18
MOVEMENT HOLDER (PLASTIC)	500-00245
BARREL AND TRAIN WHEEL BRIDGE	701-J09
CENTER WHEEL BRIDGE	702-201
UPPER PLATE FOR CALENDER	703-115
PALLET BRIDGE	708-091
BALANCE BRIDGE	710-204
CALENDAR PLATFORM	713-160
LOWER PLATE FOR BARREL COMPLETE	719-058
LOWER PLATE FOR CALENDER	719-062
BARREL LOWER WHEEL	901-A56
CLICK SPRING	903-A15
CALENDAR CORRECTOR WHEEL SPRING	903-A18
SETTING LEVER PIN	906-A12
SCREW FOR CLICK	922-820
SCREW FOR CLICK SPRING	922-820
SCREW FOR PALLET BRIDGE(x2)	922-820
SCREW FOR LOWER PLATE FOR BARREL COMPLETE (x2)	922-940
SCREW FOR SETTING LEVER JUMPER (x2)	923-630

REVERSING WHEEL	141-251
POWER RESERVE WHEEL	189-163
CALENDAR CORRECTOR WHEEL	213-623
OPERATING LEVER	257-152
BREAKELEVER FOR SECOND HAND	269-402
DATE DIAL GUARD	293-A18
MOVEMENT HOLDER (PLASTIC)	500-00245
BARREL AND TRAIN WHEEL BRIDGE	701-J09
CENTER WHEEL BRIDGE	702-201
UPPER PLATE FOR CALENDER	703-115
PALLET BRIDGE	708-091
BALANCE BRIDGE	710-204
CALENDAR PLATFORM	713-160
LOWER PLATE FOR BARREL COMPLETE	719-058
LOWER PLATE FOR CALENDER	719-062
BARREL LOWER WHEEL	901-A56
CLICK SPRING	903-A15
CALENDAR CORRECTOR WHEEL SPRING	903-A18
SETTING LEVER PIN	906-A12
SCREW FOR CLICK	922-820
SCREW FOR CLICK SPRING	922-820
SCREW FOR PALLET BRIDGE(x2)	922-820
SCREW FOR LOWER PLATE FOR BARREL COMPLETE (x2)	922-940
SCREW FOR SETTING LEVER JUMPER (x2)	923-630
SCREW FOR BALANCE BRIDGE	923-998
SCREW FOR BARREL AND TRAIN WHEEL BRIDGE(x5)	923-998
SCREW FOR CENTER WHEEL BRIDGE	923-998
SCREW FOR LOWER PLATE FOR CALENDER (x2)	923-998
SCREW FOR UPPER PLATE FOR CALENDER (x4)	923-998
SCREW FOR OSCILLATING WEIGHT (x3)	923-999
SCREW FOR CASING CLAMP(x2) (OPTION)	924-752
SCREW FOR STUD	927-020
SCREW FOR CALENDAR PLATFORM	929-700
SCREW FOR DATE DIAL GUARD	929-700
SCREW FOR TRAIN WHEEL GUARD(AUTOMATIC)(x2)	930-701
SCREW FOR TRAIN WHEEL GUARD(MANUAL- WINDING)(x3)	930-701
SCREW FOR DATE DIAL GUARD (x4)	930-702
** LONGER SETTING STEM(24.0MM) **	065-A25